


# ProtectoScan EDI - Manual for service

## Tools required

- (1) hex key 2,5 mm
- (2) nut driver M4
- (3) nut driver M3

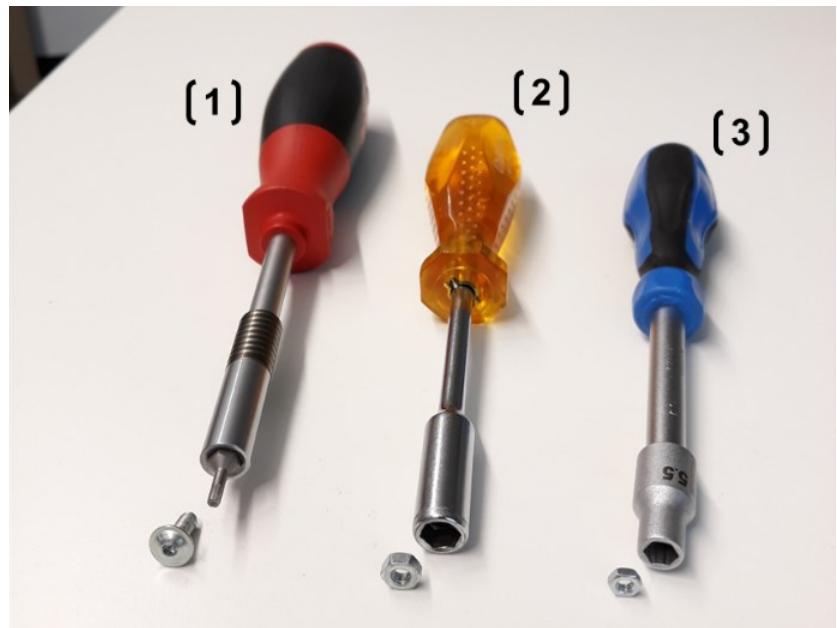

## Removement of the particle sensor


1. Remove device lid  
(4x screws)




**2. Tilt the lid forward**




**Beware of** the risk of cable breakage: The lid can only be open approx.15 cm.

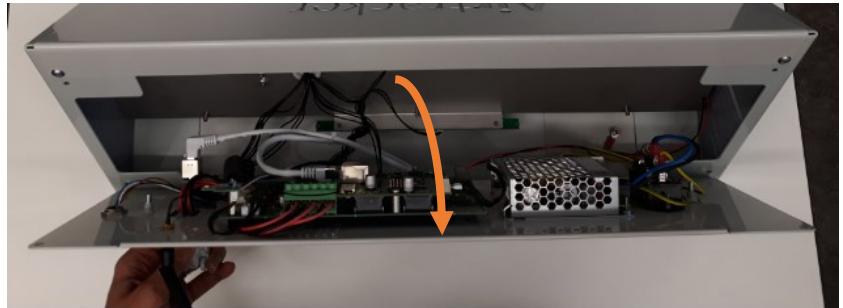


**3. Unplug cable of temperature sensor**

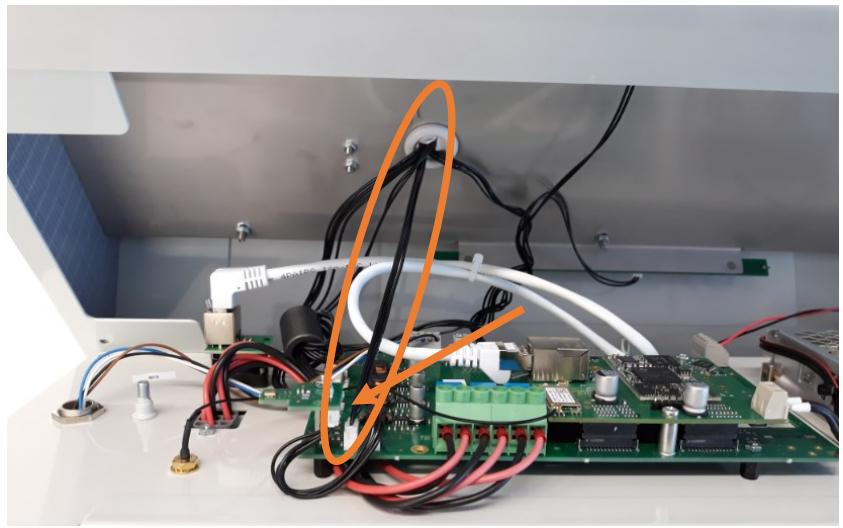


**4. Lay down device lid**

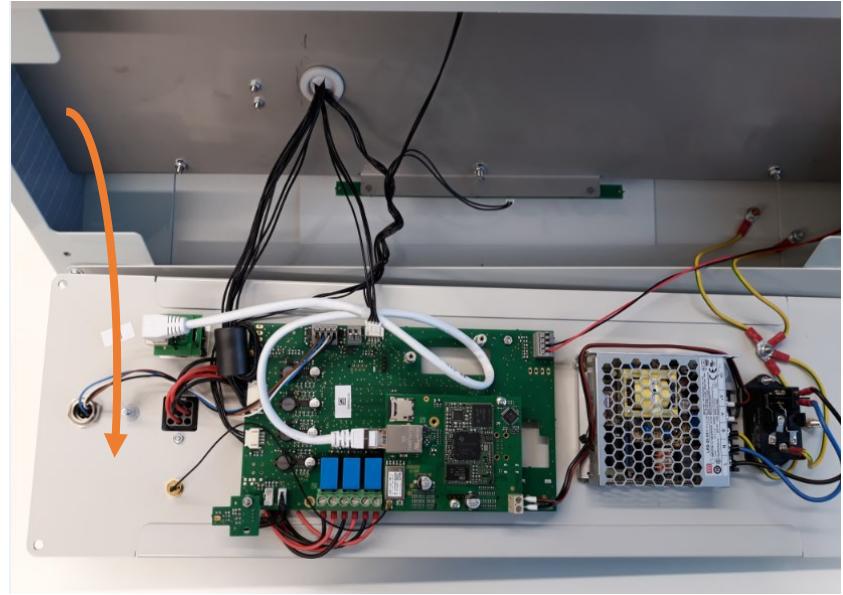


5. Screw off 2 screws and loosen the housing side part

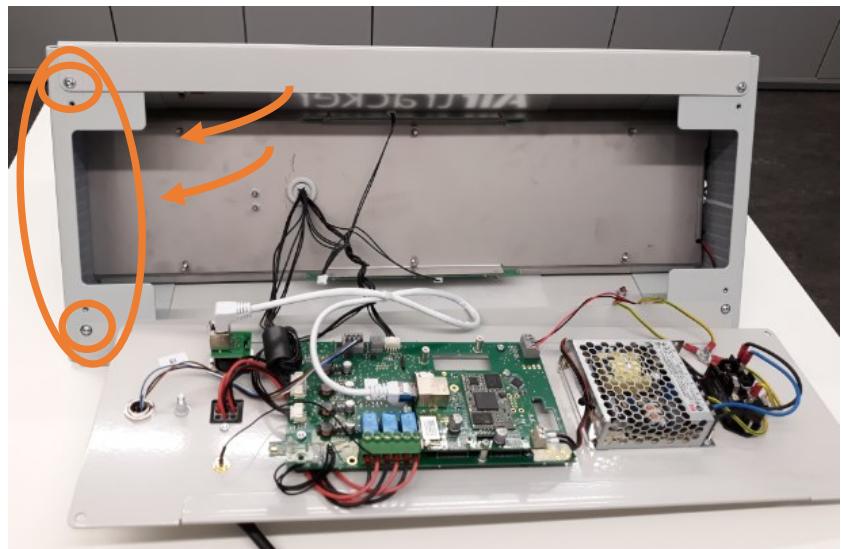


6. Remove device inner cover (6x nuts)

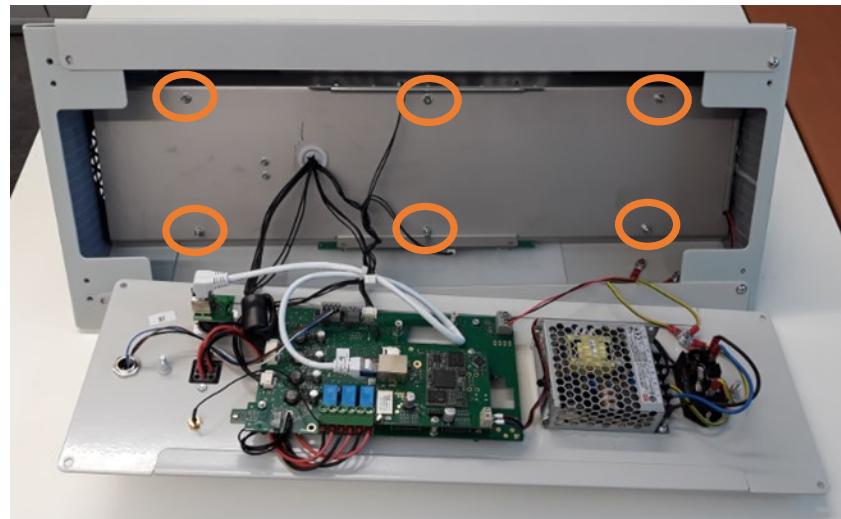

7. Carefully pull off device inner cover forward and place straight into main housing

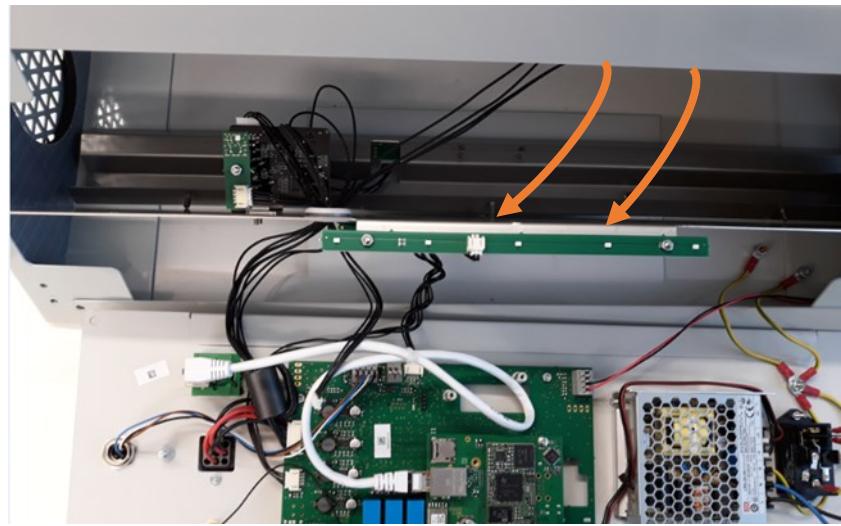

**8.** Unplug particle sensor cable from particle sensor and screw off particle sensor (1x nut)

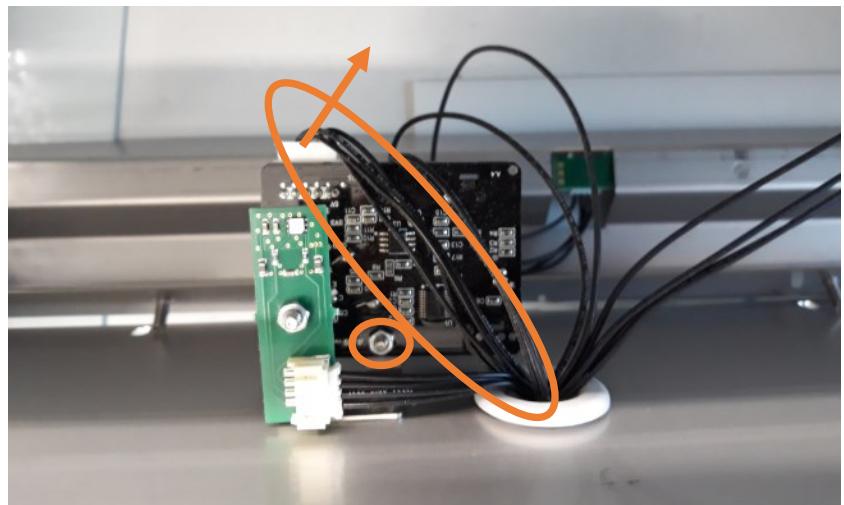


**9.** Remove new particle sensor from its packaging




### Installation of the particle sensor


**10.** Install new particle sensor (1x nut M3) and connect particle sensor cable

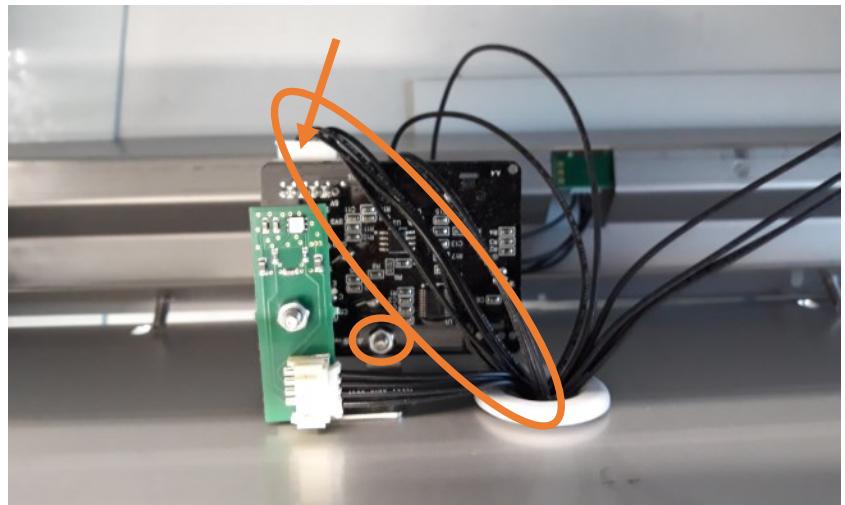


**11.** Mount device inner cover on housing pins (6x) and screw them down (6x nuts)

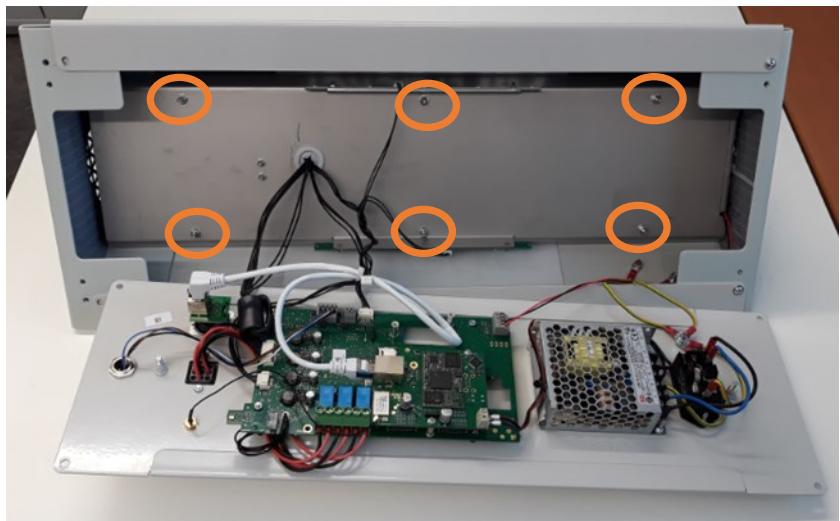

**12.** Slide loosened side part into main housing and screw down (2x screws)

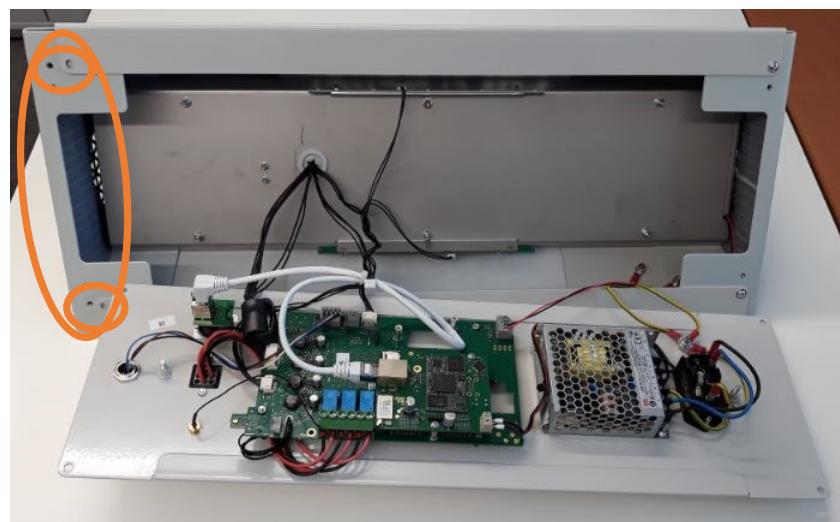

**13.** Place the device lid on main housing, tip it over and connect temperature sensor cable

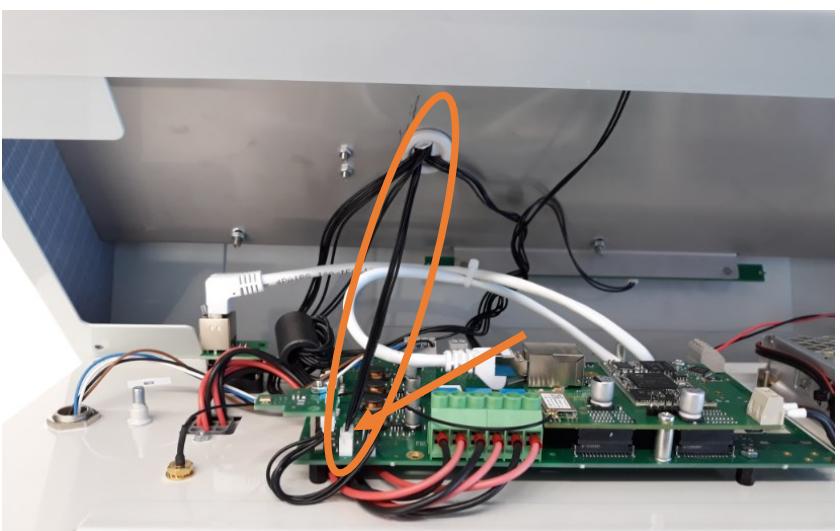

**14.** Close device lid and screw it down (4x screws)



### Reinitialization of the service date

**1.** Open the service page <https://service.extractability.net> with an internet-enabled terminal and select the action "Generate service code".

#### ProtectoScan EDI – SERVICE PAGE **Extractability**™

The following actions are available:

- [Generate the service code](#)
- [Download the service manual \(xx MB\)](#)
- [Download the service video \(xx MB\)](#)
- [Download the current software \(xx MB\)](#)

Extractability powered by Weldability SIF | Tel +44 (0) 845 862 2620 | Email: sales@extractability.eu | www.extractability.eu

**2.** Find the 16-digit sensor ID of the enclosed service card or the particle sensor and enter here.

#### ProtectoScan EDI – SERVICE PAGE **Extractability**™

Generate the service code:

Sensor ID	<input type="text"/>
Device ID	<input type="text"/>
E-mail address (optional)	<input type="text"/>

Extractability powered by Weldability SIF | Tel +44 (0) 845 862 2620 | Email: sales@extractability.eu | www.extractability.eu

**3.** Enter the 5-digit device ID of the ProtectoScan EDI. This can be taken from the name of the ProtectoScan EDI WLAN: "ProtectoScan-EDI-XXXXX".

#### ProtectoScan EDI – SERVICE PAGE **Extractability**™

Generate the service code:

Sensor ID	<input type="text"/>
Device ID	<input type="text"/>
E-mail address (optional)	<input type="text"/>

Extractability powered by Weldability SIF | Tel +44 (0) 845 862 2620 | Email: sales@extractability.eu | www.extractability.eu

4. Entry of an authorized email address for the optional sending of the service code, otherwise it has to be written down.

#### ProtectoScan EDI – SERVICE PAGE **Extractability**™

Generate the service code:

Sensor ID

Device ID

E-mail address (optional)



Extractability powered by Weldability SIF | Tel +44 (0) 845 862 2620 | Email: sales@extractability.eu | www.extractability.eu

5. Press the button "Generate service code". Code is either sent to specified email address or must be written down.


#### ProtectoScan EDI – SERVICE PAGE **Extractability**™

Generate the service code:

Sensor ID

Device ID

 E-mail address (optional)



Extractability powered by Weldability SIF | Tel +44 (0) 845 862 2620 | Email: sales@extractability.eu | www.extractability.eu

6. Open the ProtectoScan EDI service page of the WebApp: [http:// "ProtectoScan EDI IP address"/service](http://ProtectoScan EDI IP address/service) such as. (<http://192.168.12.1/service>) Enter the service code in the input field, select the desired action and activate it with the "Perform Service" button.

Extractability

Weldability Sif

Please enter the service code:

Please choose additional tasks to be performed:

Reset days until calibration  
 Delete measuring data  
 Reset to factory defaults

sales@extractability.eu | www.extractability.eu | Phone: +44 (0) 845 862 2620

7. Device restarts automatically, chosen service actions are completed.